

Use the Source Search button to changes sources...it will scan for your computer, TV feed, document camera and DVD/VCR.

Use the VOL+ and VOL- buttons to control volume of anything coming from your computer.

The Freeze button will freeze the image being projected on the screen while allowing you to work on your computer without projecting.

The A/V Mute button will put the projector in standby mode. This allows you to turn off the projected image and turn it back on without waiting for the projector to warm up . It's like a temporary off switch. Do not use for extended periods of time!

